


## Cedar Base Assembly Instructions

**Tools required:** Philips screwdriver or cordless driver, and waterproof wood glue (optional)

1. Arrange and identify components with the **countersunk holes facing upward**. Note the difference between the two front pieces (ramp pieces). The bottom piece has two screw holes, while the top piece has four screw holes.

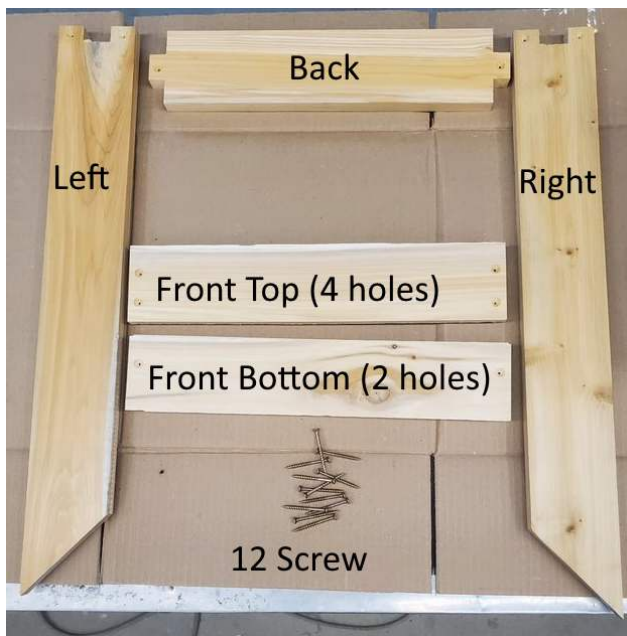

2. Assemble the Back to the Left and Right pieces with 2" screws. To start, use just one screw per corner.



3. Install the Front Bottom Board (the board with two screw holes). **Use 1-5/8" screws for this board.** The bottom edge of the board should sit flat on your work surface as shown below.



4. Install the Front Top board with 2" screws (the board with four screw holes).



5. Install the remaining 2" screws in the back corners.

